



# ATLANTICA

PEDANE DOCCIA\_Shower mats \_ Caillebotis \_ Duschfußbrett

## Finiture \_ Finishes \_ Finitions \_ Afwerkingen

### Legno Okumè

Okumè wood  
Bois Okumè  
Holz Okumè




.08



# ATLANTICA

## Pedana doccia in multistrato marino

Marine plywood shower mat / Caillebotis douche en bois multicouche marin / Duschfußbrett aus marine Sperrholz

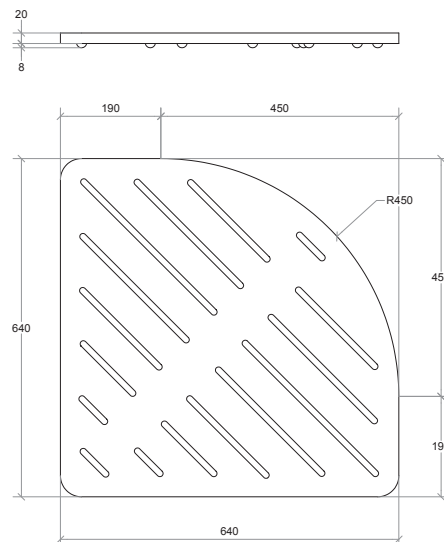

Peso e volume lordo / Gross weight and volume / Poids et volume brut / Bruttogewicht und Volumen

cod.	EAN	KG	m <sup>3</sup>	cm	Legno Okumè Okumè wood Bois Okumè Holz Okumè
7230	8005049010098	11	0,034	640x640	

### PULIZIA e MANUTENZIONE

Pulire con un sapone neutro, applicare con un panno umido, strofinare leggermente, lasciar agire brevemente e quindi sciacquare con acqua. Infine lucidare con un panno morbido e asciutto. Per macchie di calcare pulire con una soluzione di acqua (80%) e aceto bianco (20%), per un'azione igienizzante aggiungere alla soluzione del bicarbonato di sodio. Asciugare sempre la superficie in modo da evitare le macchie derivanti dall'acqua.

Avvertenze: La resistenza alla corrosione al nichel-cromo si riduce sotto l'azione di acidi e composti alogenati (cloruri, bromuri, ioduri). Non utilizzare mai soluzioni a base di cloro (candeggina), detersivi o spugne abrasive. Evitare la ruggine causata da materiali esterni (ad es. paglietta di acciaio ecc.).

### CARE and MAINTENANCE

Clean with a mild soap, apply with a damp cloth, rub lightly, leave it briefly and then rinse with water. Finally polish with a soft, dry cloth. To remove the limestone stains, clean with a solution of water (80%) and white vinegar (20%), to sanitize add baking soda. Always dry the surface in order to prevent stains caused by water. Warnings: The corrosion resistance of the steel is reduced by acids and halogen compounds (chlorides, bromides, iodides). Never use solutions containing chlorine (bleach), detergents or abrasive sponges. Prevent rust caused by external materials (eg. Scouring steel, etc..).